

SWINGBED *ROPE* HANGING KIT CONTENT & ILLUSTRATIONS:

NOTE: Haven & Harmony strongly recommends hiring a professional contractor to perform your swung installation. It is crucial to make sure the swing is properly secured to avoid potential injuries and damage. Haven & Harmony is not liable for any injuries or damage resulting from a Swing Bed installation. Find further information on our [Policies](#) page.

The ILLUSTRATIONS below refer to the hanging hardware we offer as a purchasing option for our Swing Beds. Please note that other hanging methods may not be represented. Swing Bed frame should be installed into a structural ceiling component or concrete ceiling.

TOOLS RECOMMENDED:




- **Drill with bits for starter holes**
- **Wrench or electric driver**
- **Screwdriver**
- **Square**
- **Tape measure**
- **Plumb Bob**

Scan the QR code to see additional Hanging Tips on our FAQ page:








ROPE HANGING KIT

Includes one rope option below:

Product Illustration	Specifications	8' Ceiling	10' Ceiling	12' Ceiling	14' Ceiling
	<p>1" Manilla natural rope w/ four (4) top loops</p>	<p>8' + 18" for knot</p>	<p>10' + 18" for knot</p>	<p>12' + 18" for knot</p>	<p>14' + 18" for knot</p>
	<p>1" Unmanilla poly rope w/ four (4) top loops</p>	<p>8' + 18" for knot</p>	<p>10' + 18" for knot</p>	<p>12' + 18" for knot</p>	<p>14' + 18" for knot</p>
	<p>1" Black poly rope w/ four (4) top loops</p>	<p>8' + 18" for knot</p>	<p>10' + 18" for knot</p>	<p>12' + 18" for knot</p>	<p>14' + 18" for knot</p>

ROPE HANGING KIT WITH HANGING HARDWARE - SWING-MATE® OR LAG EYE BOLT:

Kit includes one rope product option below + choice of installation hardware:

	Specifications	8' Ceiling	10' Ceiling	12' Ceiling	14' Ceiling
	1" Manilla natural rope w/ four (4) top loops Hardware choice woven on each loop eye	8' + 18" for knot	10' + 18" for knot	12' + 18" for knot	14' + 18" for knot
	1" Unmanilla poly rope w/ four (4) top loops Hardware choice woven on each loop eye	8' + 18" for knot	10' + 18" for knot	12' + 18" for knot	14' + 18" for knot
	1" Black poly rope w/ four (4) top loops Hardware choice woven on each loop eye	8' + 18" for knot	10' + 18" for knot	12' + 18" for knot	14' + 18" for knot
OPTIONAL KIT ALSO INCLUDES <u>ONE</u> HARDWARE OPTION BELOW:					
	Swing-Mate® Brackets woven on each rope loop	4	4	4	4
	Galvanized Lag Eye Bolt 1/2" x 3 1/2" + 1/4" Shackle	4 4	4 4	4 4	4 4


ROPE HANGING KIT – INSTALLATION INSTRUCTIONS

NOTE: Haven & Harmony strongly recommends hiring a professional contractor to perform your swung installation. It is crucial to make sure the swing is properly secured to avoid potential injuries and damage. Haven & Harmony is not liable for any injuries or damage resulting from a Swing Bed installation. Find further information on our [Policies](#) page.

We have suggestions and tips we've learned that might be helpful during installation on our [FAQ](#) page.


STEP 1:


POSITION THE SWINGBED ON TOP OF 4 - 5 GALLON BUCKETS AT THE LOCATION IT WILL BE PERMANENTLY INSTALLED. ADDITIONAL SUPPORTS CAN BE ADDED ON TOP OF EACH BUCKET TO INCREASE THE HEIGHT.

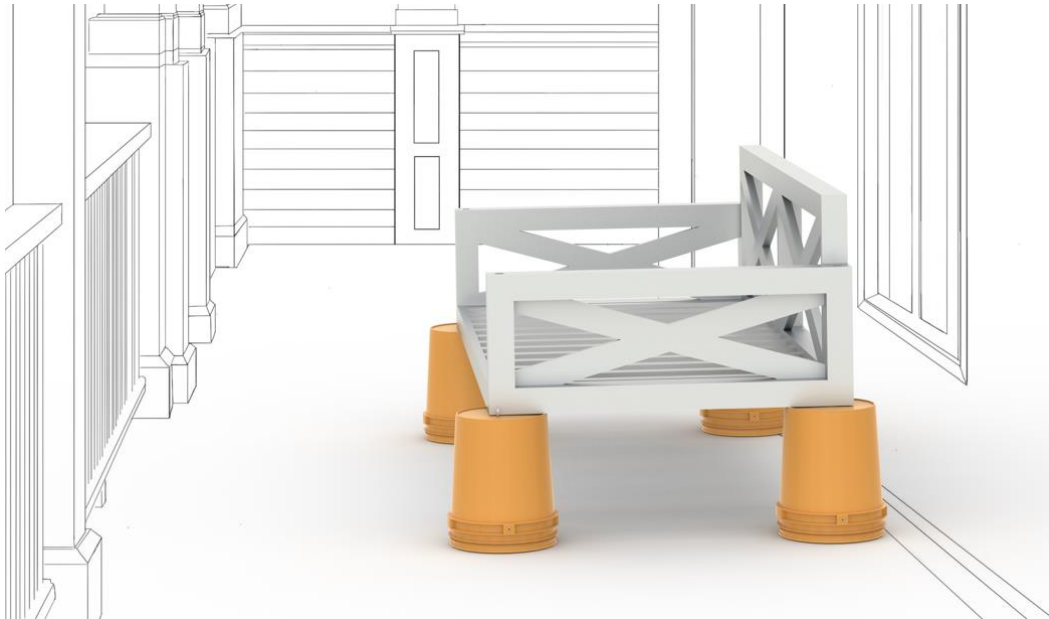


STEP 2:

MARK POINTS ON THE CEILING WHERE YOUR INSTALLATION HARDWARE WILL BE LOCATED. THESE POINT SHOULD DIRECTLY ALIGN WITH THE HANGING CHANNELS IN THE 4 ARM LOCATIONS OF THE SWING. BELOW IS THE LOCATION GUIDE ILLUSTRATION (AERIAL VIEW)

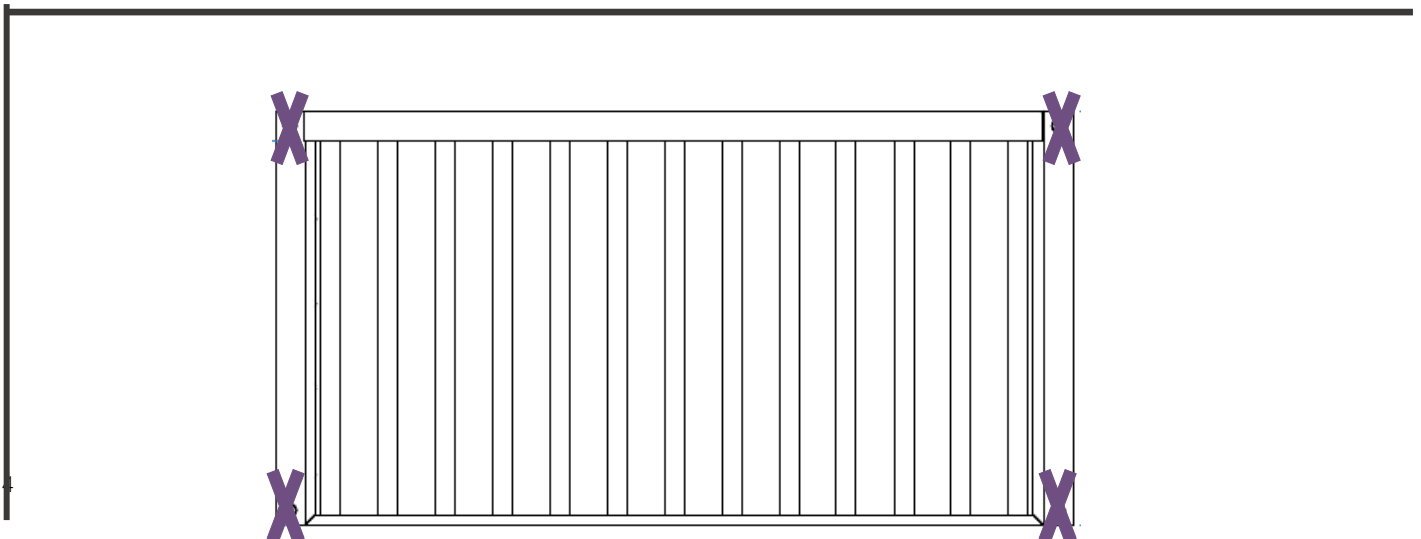

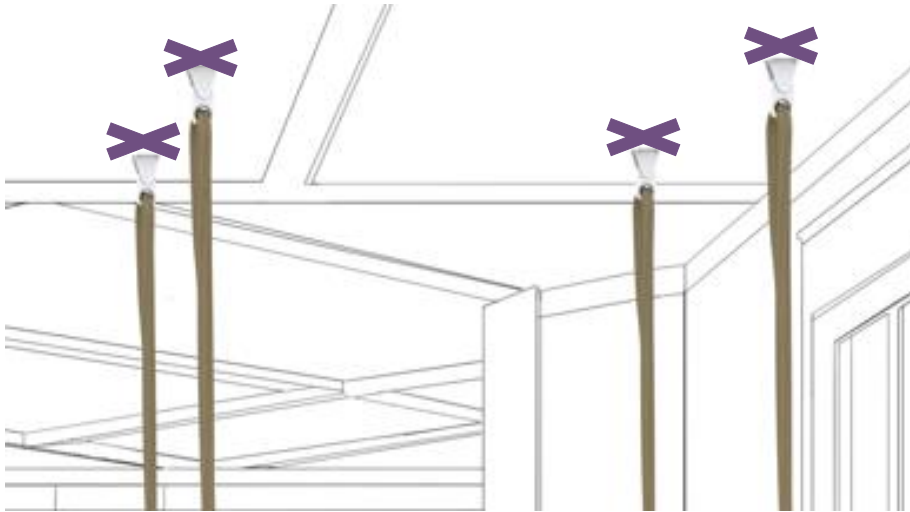

HANGING CHANNEL LOCATIONS BY SWING BED SIZE

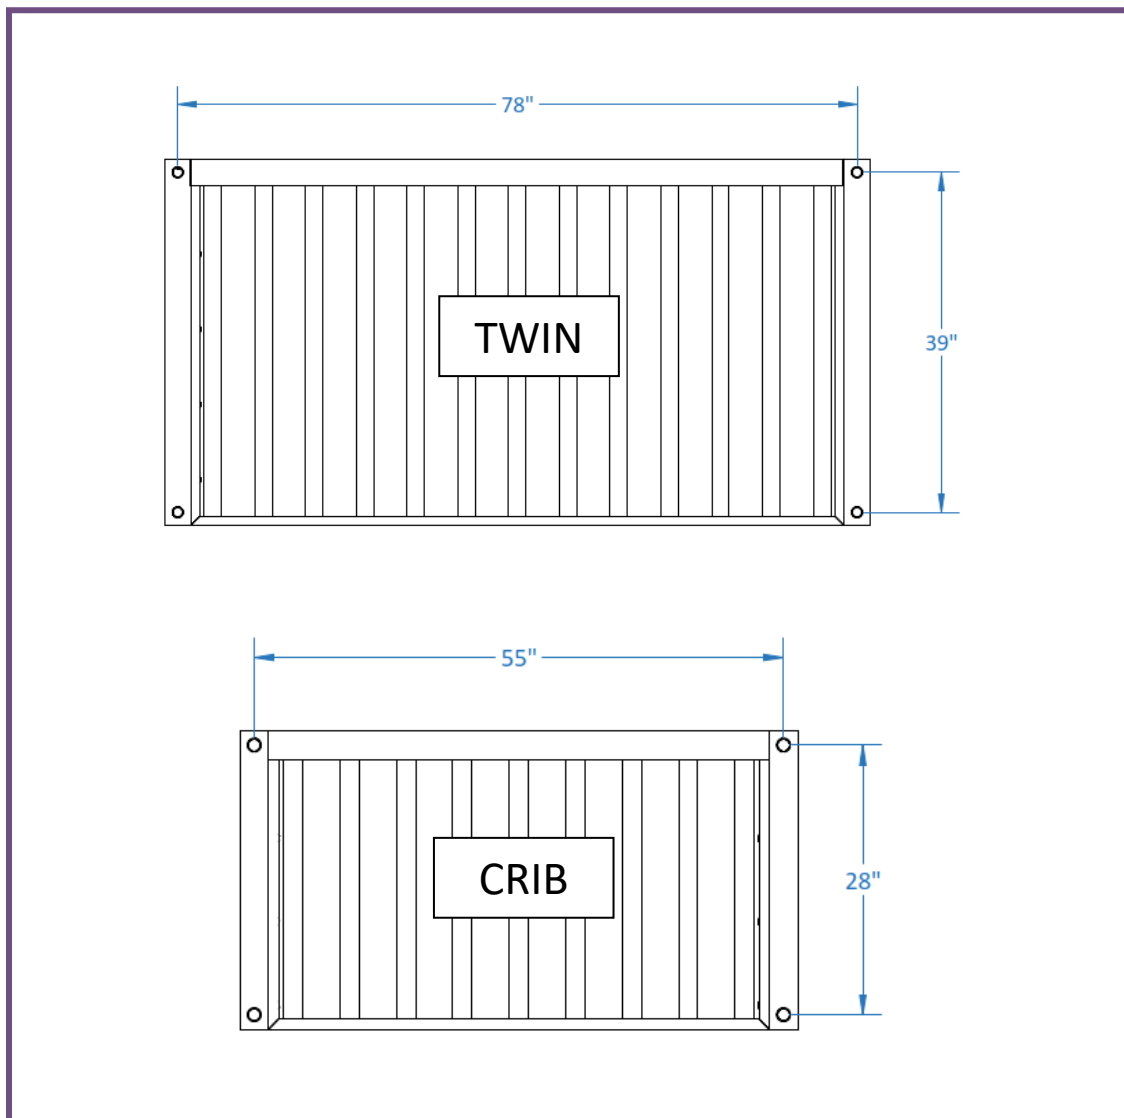

STEP 3:

MOVE THE SWING OFF TO ONE SIDE WHILE YOUR PROFESSIONAL CONTRACTOR INSTALLS PREFERRED HANGING BRACKETS (SWING-MATE®, LAG EYE OR CONTRACTOR/PERSONAL SELECTION). YOU SHOULD NOW HAVE 4 ROPES HANGING FROM THE CEILING.



STEP 4:

REPLACE SWINGBED BACK INTO ORIGINAL POSITION AND START DROPPING ONE (1) ROPE LENGTH THROUGH A HANGING CHANNEL LOCATED ON EACH SWING BED CORNER. **NOTE:** USE THE END WITHOUT THE LOOP EYE.

STEP 5:

TIE A SINGLE KNOT UNDER EACH CORNER OF THE SWINGBED. WHILE TRYING TO SLIGHTLY LIFT THE SWINGBED, TIGHTEN EACH KNOT AS CLOSE TO THE SWINGBED FRAME AS POSSIBLE.

TIP: Using tape, measure and mark the same distance from the end of each rope for better knot placement.

STEP 6:

PUSH DOWN ON EACH SWING BED CORNER TO SET THE KNOT.

STEP 7:

REMOVE BUCKETS, ADD CUSHIONS AND ENJOY!

TIP ... REPEAT STEP 5 IF SWINGBED IS NOT LEVEL OR IF SWINGBED SEAT IS NOT AT THE DESIRED HEIGHT.

Let us hear from you!

support@havenandharmony.com

[727.597.4142](tel:727.597.4142)

